


九龍紅磡鶴園街 13 號康力投資大廈 3 樓 317 室

## NEO 更改 WIFI 密碼 及使用者名稱/密碼

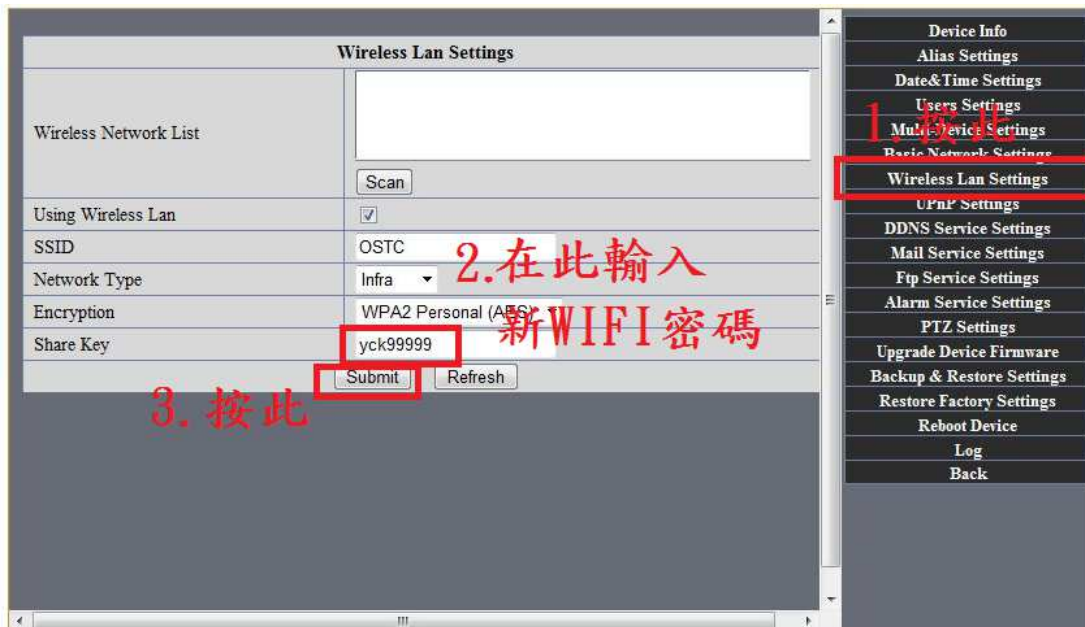

九龍紅磡鶴園街 13 號康力投資大廈 3 樓 317 室

<http://192.168.1.1:8080> 或者

<http://192.168.0.1:8080>



九龍紅磡鶴園街 13 號康力投資大廈 3 樓 317 室



**TP-LINK**

產品狀態  
快速安裝精靈  
QSS  
網絡設定  
無線網絡  
無線網絡設定  
無線網絡加密設定  
無線網絡MAC位址控制  
無線網絡進階設定  
無線網絡統計資訊  
DHCP伺服器  
通訊埠導向(NAT)  
安全性設定  
未成年子女上網管理  
網絡使用權限規則管理  
固定路由  
頻寬管理  
ARP綁定


版本: 自動選擇  
加密方式: 自動選擇  
Radius伺服器IP位址:   
Radius伺服器使用通訊埠: 1812 (範圍: 1-65535, 0代表預設通訊埠1812)  
Radius密碼:   
組金鑰更新週期: 0 (以秒計算, 最小值為30, 0代表不更新)

**1. 按此**

**2. 按此**

WPA-PSK/WPA2-PSK  
版本: 自動選擇  
加密方式: 自動選擇  
PSK金鑰(密碼):  **3. 輸入你想更改的 WIFI 密碼**  
(您可以輸入8-63位的ASCII碼[0-9/A-Z/a-z]或8-64位的16進位碼[0-9/A-F/a-f])  
組金鑰更新週期: 0 (以秒計算, 最小值為30, 0代表不更新)

**4. 按此再按重新啟動 ROUTER**

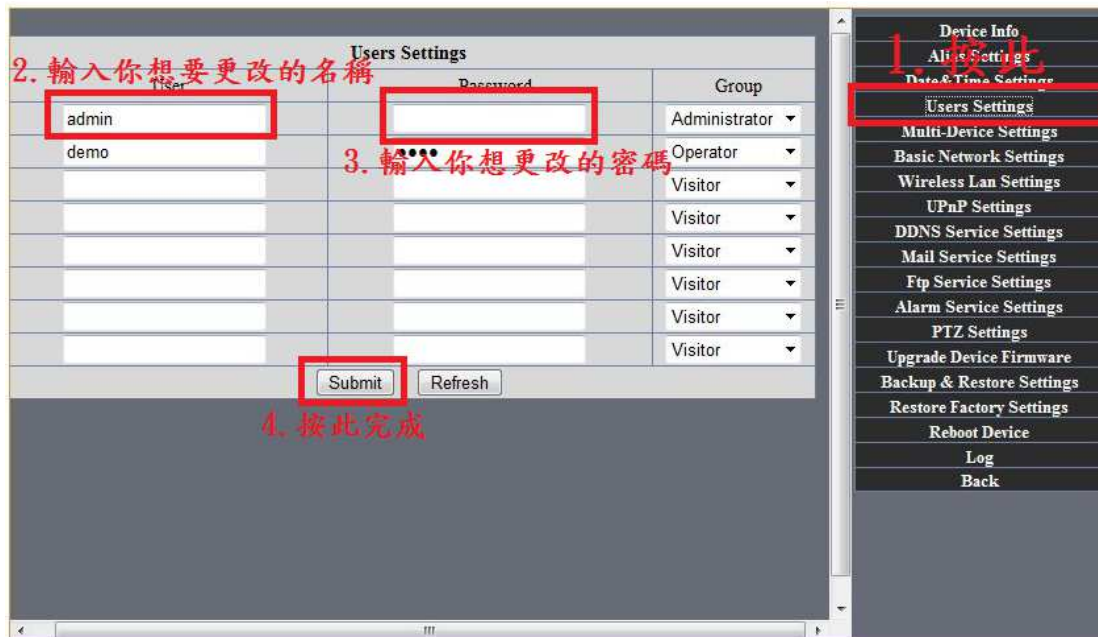

Users Settings

**1. 按此**

User	Password	Group
<input type="text" value="admin"/>	<input type="text"/>	Administrator
demo		Operator
		Visitor
		Visitor
		Visitor
		Visitor
		Visitor
		Visitor

**2. 輸入你想要更改的名稱**

**3. 輸入你想更改的密碼**

**4. 按此完成**

Device Info  
Alias Settings  
Data & Time Settings  
**Users Settings**  
Multi-Device Settings  
Basic Network Settings  
Wireless Lan Settings  
UPnP Settings  
DDNS Service Settings  
Mail Service Settings  
Ftp Service Settings  
Alarm Service Settings  
PTZ Settings  
Upgrade Device Firmware  
Backup & Restore Settings  
Restore Factory Settings  
Reboot Device  
Log  
Back